


DG-900AD Automatic adjustment Trigger sensitivity



When changing different sealing diameters, please reset the heating time and trigger sensitivity.

1. Long press the SETUP button  for 3 seconds, release button after three beeps.

2. Put the bottle (cap fitted with aluminum foil) closely under the center of the heating head and pressure on the bottle, remain intact until the setting is complete. The machine will identify the sensitivity automatically.

3. Press the Setup button  to complete the setting.

At this point, the automatic trigger sensitivity setting is completed, and the heating head can be removed from the bottle cap.

Press +/- keys   to adjust the proper sealing time.

After each adjustment, please wait 5 seconds before performing the sealing operation.

The smaller the diameter of the bottle mouth, the greater the sensitivity value.

If the trigger is not sensitive, deliberately offset the distance of half a cap when adjusting the sensitivity.

Input:AC 220V Single Phase